

MISUTONIDA *italian style accessories* **4x4**

KIA CARENS



Item Code

:

TPSO/219/IX

Codice Articolo

GPO/219/IX

Référence Article

GB

STAINLESS STEEL
SIDE OVAL PROTECTIONS

ITA



PROTEZIONI SOTTOPORTA OVALI
IN ACCIAIO INOX


FR

PROTECTIONS LATÉRALES
OVALES EN ACCIER INOX

KIA CARENS

Part List
Lista della bulloneria
Liste des pièces

A  P/200/C x 2	L  TE 8X25 x 8
B  TE 10X30 x 2	M  Ø 8 x 8
C  Ø 10 x 6	N  Ø 8 x 8
D  Ø 10 x 6	O  M 8 x 8
E  M 10 x 4	P  GPO/219/B x 2
F  TE 6X20 x 2	Q  GPO/219/C x 2
G  Ø 6 BIG GRANDI GRAND x 10	
H  Ø 6 x 10	
I  P/48 x 2	

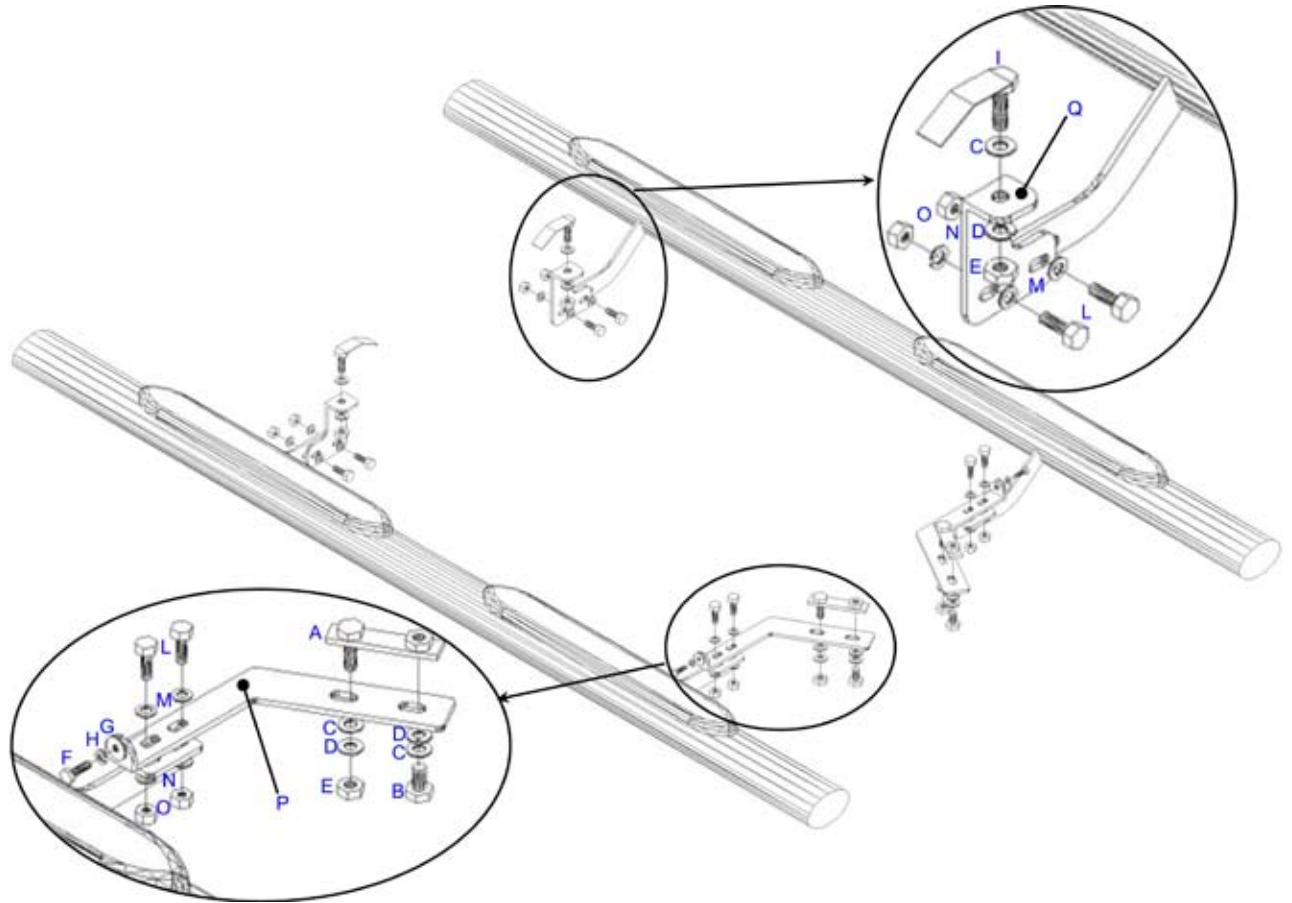

GB**FITTING
INSTRUCTIONS****FRONT SIDE**

1. Insert A in the hole indicated in picture 1 and make it come out as shown in picture 2.
2. Remove the bolt shown in picture 3.
3. Fit P using B,C,D,H,I,G as shown in picture 4.

REAR SIDE

4. Remove the plastic cap shown in picture 5.
5. Insert I in the hole shown in picture 6 and make it come out.
6. Fit T on I using C,D,E.
7. Fit the brackets welded to the accessory using L,M,N,O as shown in pictures 7 and 8.
8. Tighten all the set of bolts.

ITA**ISTRUZIONI DI
MONTAGGIO****PARTE ANTERIORE**

1. Inserire A nel foro indicato in foto 1 e farlo fuoriuscire come indicato in foto 2.
2. Rimuovere il bullone indicato in foto 3.
3. Montare P utilizzando B,C,D,H,I,G come indicato in foto 4.

PARTE POSTERIORE


4. Rimuovere il tappo in gomma indicato in foto 5.
5. Inserire I nel foro indicato in foto 6 e farlo fuoriuscire.
6. Montare T su I utilizzando C,D,E.
7. Montare le staffe saldate all'accessorio utilizzando L,M,N,O come indicato in foto 7 e 8.
8. Serrare tutta la bulloneria.


FR**INSTRUCTIONS DE
MONTAGE****PARTIE ANTERIEURE**

1. Insérer A dans le trou indiqué en photo 1 et le faire sortir comme indiqué en photo 2.
2. Enlever le boulon indiqué en photo 3.
3. Monter P en utilisant B,C,D,H,I,G comme indiqué en photo 4.

PARTIE POSTERIEURE

4. Enlever le bouchon en plastique indiqué dans la photo 5.
5. Insérer I dans le trou indiqué dans la photo 6 et le faire sortir.
6. Monter T sur I en utilisant C,D,E.
7. Monter les pattes de fixation soudées à l'accessoire en utilisant L,M,N,O comme indiqué dans les photos 7 et 8.
8. Serrer toute la boulonnerie.

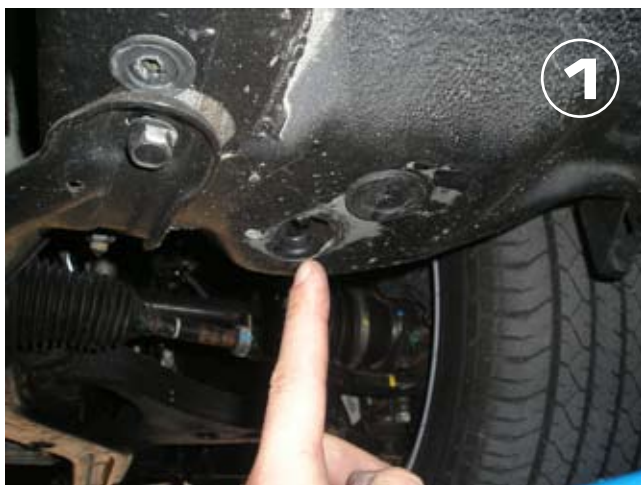

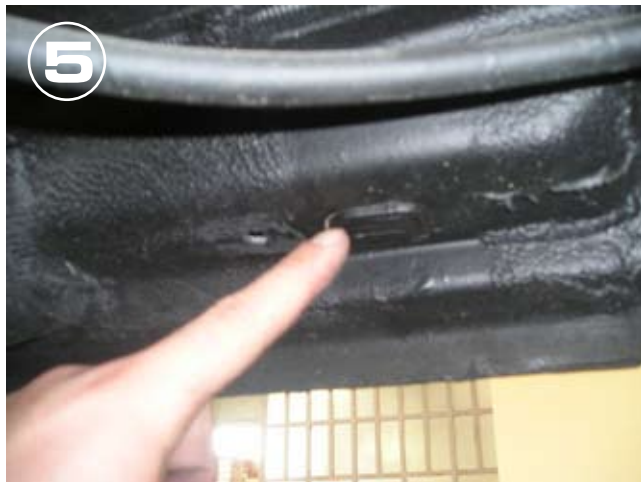

Date Data Date	Item Code Cod.Articolo Réf. Article	Vehicle model Modello Veicolo Modèle de Voiture
07/05/08	GPO/219/IX TPSO/219/IX	KIA CARENS

Checked and approved by
Controllato ed approvato da
Contrôlé et approuvé par

Botta
Pietro