


HONDA CR-V 2.0 16V 98/01



MISUTONIDA s.r.l. - 12062 CHERASCO (CN) - Via Fondovalle n° 3
Tel. 0172-489283 - Fax 0172-488381

Web Site: <http://www.misutonida.com> - E-mail: misutonida@misutonida.com

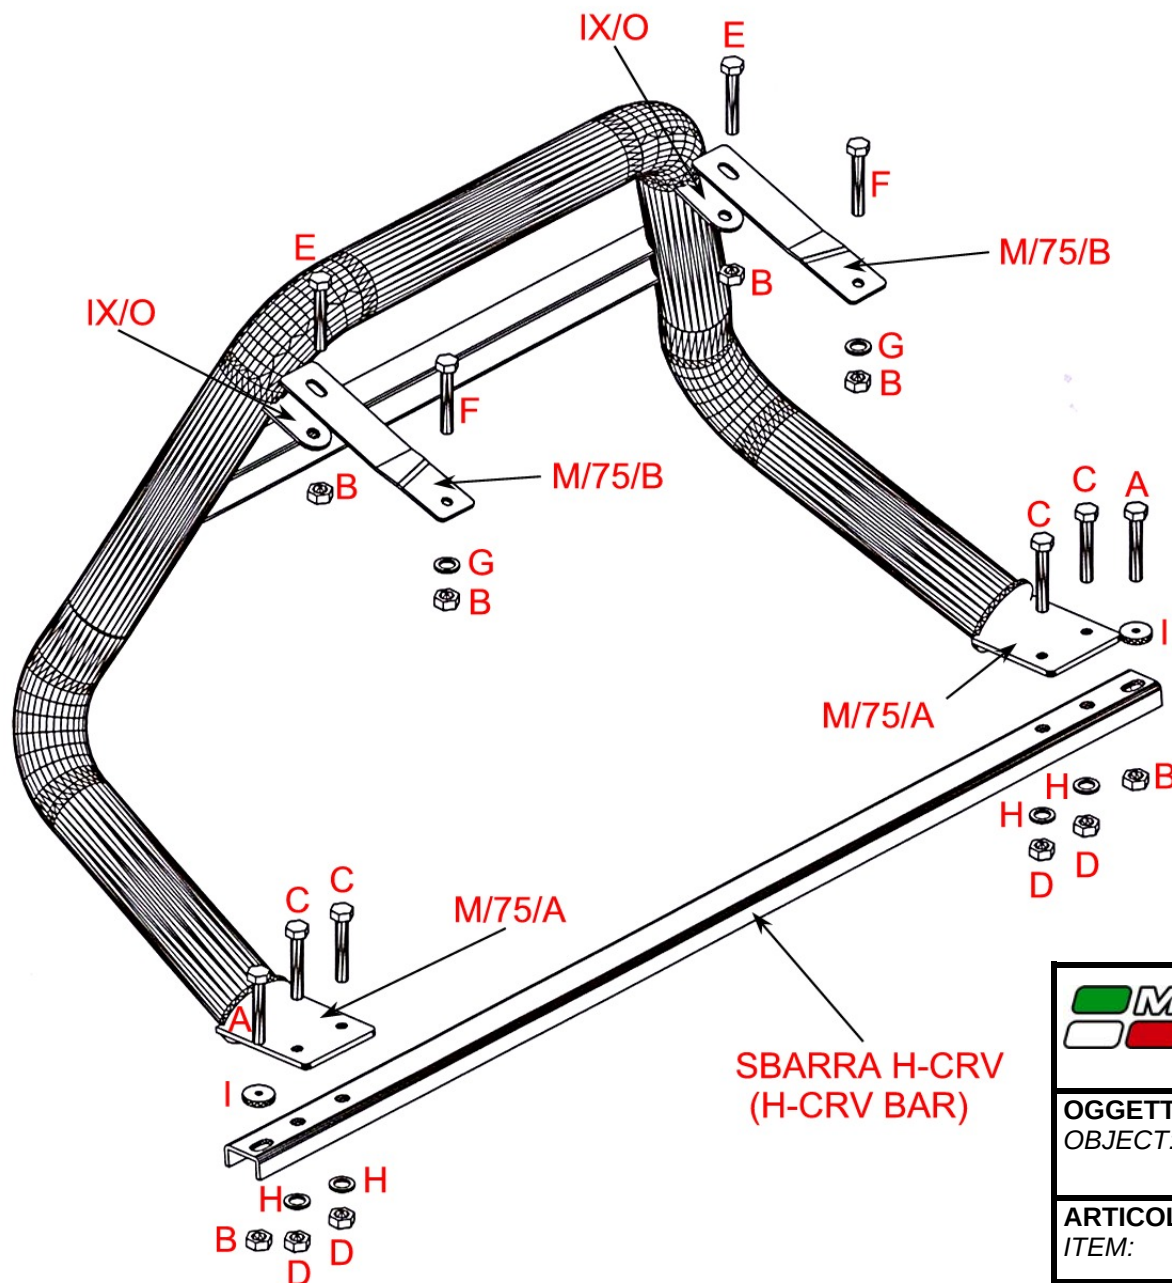

BULLONERIA ED ACCESSORI BOLT AND ACCESSORIES

2	TE 8x30 – BOLT	A
6	M8 AUTOB. – NUT	B
4	TE 10x30 – BOLT	C
4	M10 AUTOB. – NUT	D
2	TBCEI 8x20 – BOLT	E
2	TE 8x20 – BOLT	F
2	ROND Ø14x8x1,5– WASHER	G
6	ROND Ø24x13X2– WASHER	H
2	BOCCOLE H-CRV–BUSHES	I

	DATA		REALIZZATO DA:
	25/07/03		MANDALITI A.
	CONTROLLATO E APPROVATO DA		
	GALLO CLAUDIO		
OGGETTO: OBJECT:	MEDIUM BAR – MEDIUM BAR		
	HONDA CR-V 2.0 16V 98/01		
ARTICOLO: ITEM:	MED/75/IX	Versione acciaio INOX AISI 304 Stainless Steel AISI 304 version	

HONDA CR-V 2.0 16V 98/01



ISTRUZIONI DI MONTAGGIO



1. MONTARE LA SBARRA (H/CR-V) AL TELAIO DELLA VETTURA UTILIZZANDO I DUE FORI GIA' ESISTENTI SUI GANCI SITUATI SOTTO IL PARAURTI.
2. SMONTARE LA MASCHERINA SOTTO IL COFANO DELLA MACCHINA.
3. UTILIZZANDO I DUE FORI PIU' ESTERNI POSTI SUL PARAURTI, MONTARE LE DUE STAFFETTE M/75/B IN DOTAZIONEAL KIT. (PER LIBERARE I FORI ESTRARRE I TAPPI DI GOMMA)
4. MONTARE IL MEDIUM BAR.
5. SERRARE LE VITI.
6. RIMONTARE LA MASCHERINA E I PARASPRUZZI.

FITTING INSTUCTIONS



1. FIT THE BAR (H/CRV) TO VEHICLE BODYWORK USING THE 2 HOLES ALREADY EXISTING ON HOOKS LOCATED UNDER THE BUMPER.
2. REMOVE THE MASK LOCATED UNDER THE VEHICLE HOOD.
FIT BOTH M75B BRACKETS SUPPLIED IN THE KIT ON THE 2 OUTER HOLES OF THE BUMPER (TO FREE THE HOLES REMOVE THE RUBBER PLUGS).
3. INSERT A WASHER Ø24x13x2 AS A SHIM IN EACH HOLE BETWEEN FRAME AND M/75/B BRACKETS.
4. FIT THE MEDIUM AND TIGHTEN ALL SCREWS.
5. PUT VEHICLE MASK BACK IN PLACE

INSTRUCTIONS DE MONTAGE



1. MONTER NOTRE BARRE AU CHASSIS DU VEHICULE A L'AIDE **DES DEUX TROUS EXISTANT SUR LES CROCHETS LOGES PAR** DESSOUS LE PARE-CHOC.
2. DEMONTER LE COUVRE-RADIATEUR LOGE PAR-DESSOUS LE CAPOT DU VEHICULE.
3. A L'AIDE DES DEUX TROUS LES PLUS A L'EXTERIEUR PAR-DESSUS LE PARE-CHOC, MONTER LES DEUX BRIDES (M/75/B) FOURNIES DANS VOTRE KIT.
(IL FAUT EXTRAIRE LES BOUCHONS CAOUTCHOUC DE FACON A LIBERER LES TROUS.
4. INSERER UNE RONDELLE Ø24x13x2 DANS CHAQUE TROU COMME CALE ENTRE LE CHASSIS ET LA BRIDE M/75/B.
5. MONTER LE TUBE DU MEDIUM BAR ET SERRER LES VIS
6. REMONTER LE COUVRE RADIATEUR.

	DATA		REALIZZATO DA:
	25/07/03		MANDALITI A.
	CONTROLLATO E APPROVATO DA		
	GALLO CLAUDIO		
OGGETTO:	MEDIUM BAR – MEDIUM BAR		
OBJECT:	HONDA CR-V 2.0 16V 98/01		
ARTICOLO:	MED/75/IX	Versione acciaio INOX AISI 304	
ITEM:		Stainless Steel AISI 304 version	