

MISUTONIDA *italian style* **4x4** *accessories*

OPEL ANTARA



Item Code

Codice Articolo

Référence Article

: **MED/202/IX**
MED/K/202/IX

GB

**STAINLESS STEEL
MEDIUM BAR**

ITA


**MEDIUM BAR
IN ACCIAIO INOX**

FR

**MEDIUM BAR
EN ACCIER INOX**

OPEL ANTARA

Part List Lista della bulloneria <i>Liste des pièces</i>		
A	 TE 8X35	x 2
B	 Ø 8	x 2
C	 Ø 8	x 2
D	 DELTA	x 2
E	 PARKER Ø 6	x 2
F	 VIPLA Small Piccola Petite	x 2

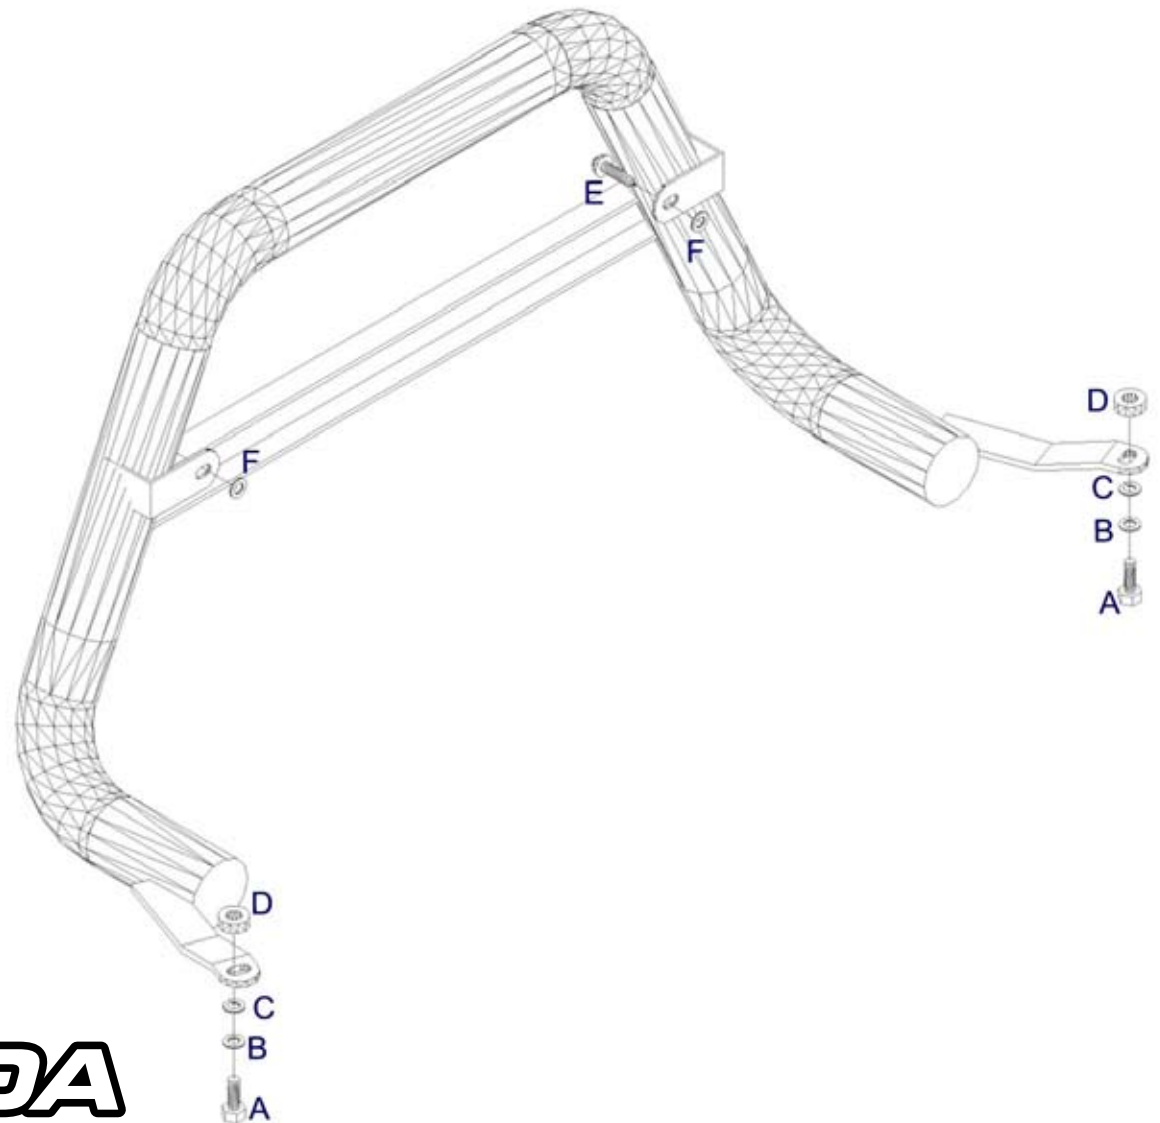

MISUTONIDA
 **italian style**
accessories 4x4

GB**FITTING
INSTRUCTIONS**

1. Remove the numberplate and numberplate holder (pictures 1 and 2).
2. Remove the n.2 bolts located in the lower part of the front bumper (picture 3)
3. Fit the lower brackets welded to the accessory using A,B,C,D as shown in picture 4.
4. Drill n.2 Ø 5mm holes in correspondence of the upper brackets welded to the accessory (picture 5).
5. Fix the upper brackets welded to the accessory together with the numberplate holder by rotating it 180° using E,F (picture 6)
6. Tighten all the set of bolts.

ITA**ISTRUZIONI DI
MONTAGGIO**

1. Rimuovere targa e porta targa (foto1 e 2)
2. Rimuovere i n.2 TE posizionati nella parte inferiore del paraurti (foto3).
3. Fissare le staffe inferiori saldate all'accessorio utilizzando A,B,C,D come indicato in foto 4.
4. Praticare n.2 fori Ø 5mm in corrispondenza delle 2 staffe superiori saldate all'accessorio (foto 5).
5. Fissare le staffe superiori saldate all'accessorio insieme al porta targa ruotandolo di 180° utilizzando E,F (foto 6).
6. Serrare tutta la bulloneria.

FR**INSTRUCTIONS DE
MONTAGE**

1. Enlever la plaque d'immatriculation et le porte plaque d'immatriculation (photos 1 et 2).
2. Enlever les n.2 boulons positionnés dans la partie inférieure du parechoc (photo 3).
3. Fixer les étriers inférieurs soudés à l'accessoire en utilisant A,B,C,D comme indiqué en photo 4.
4. Percer n.2 trous Ø 5mm en correspondance des étriers supérieurs soudés à l'accessoire (photo 5)
5. Fixer les étriers supérieurs soudés à l'accessoire avec le porte plaque d'immatriculation en le pivotant de 180° en utilisant E,F (photo 6).
6. Serrer toute la boulonnerie.



Date Data Date	Item Code Cod.Articolo Réf. Article	Vehicle model Modello Veicolo Modèle de Voiture
07/05/07	MED/202/IX MED/K/202/IX	OPEL ANTARA

Checked and approved by
Controllato ed approvato da
 Controlé et approuvé par

**Botta
Pietro**